




# DLED 5200-WL Installing a Concrete Trough Lighting System

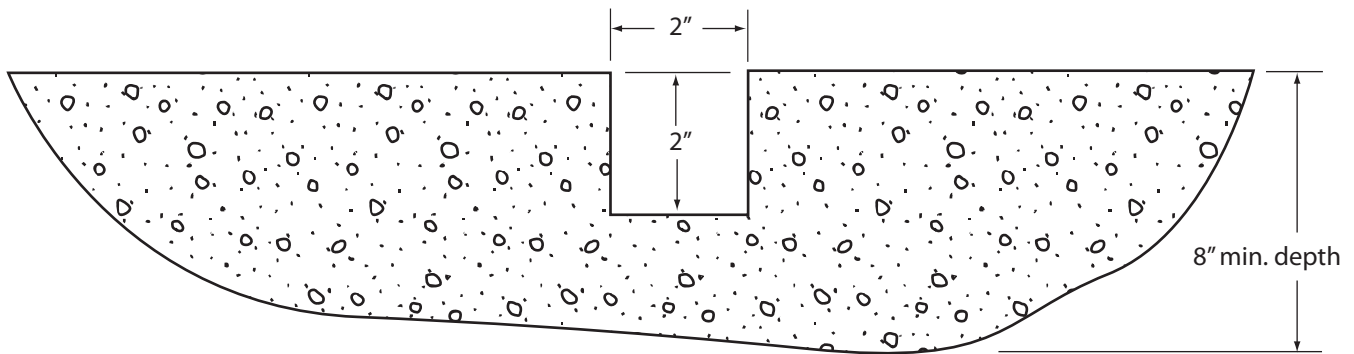

1. Cast a 2" x 2" trough in concrete.

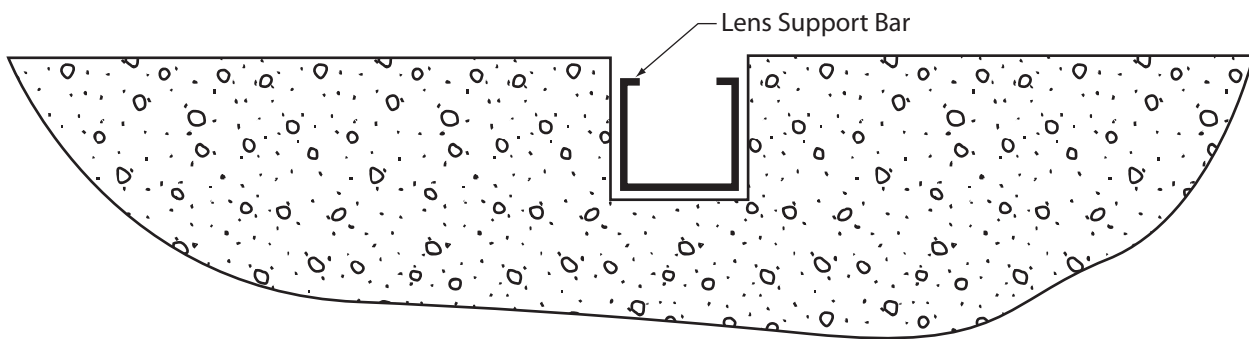

2. Install Lens Support Bar into trough and run low voltage feed wire to LED feed points from a correctly sized Class II transformer.

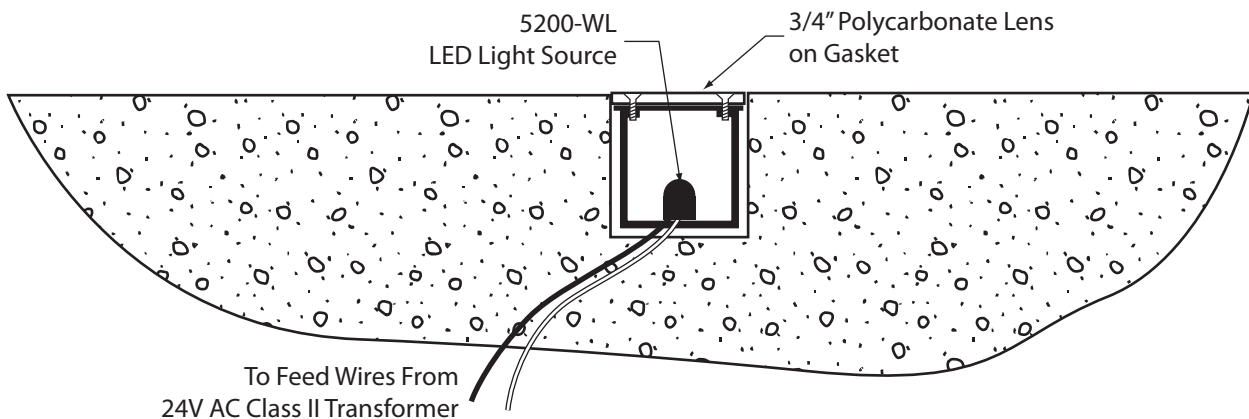

3. Attach wires from 5200-WL to feed wires coming from the transformer using wet location wire nuts. Install 5200-WL tube into trough and screw Polycarbonate Lens to Lens Support Bar using Gasket. Supply 24 Volt AC Power from Class II Transformer.