


# Aria Post Top Installation Instructions


**Turn off all power before beginning mounting process.**

1. Create a smooth mounting area in the hardscape for Aria Post to attach to. While making this mounting area, install either the recess junction box or provide power in center of area inside a 1" PVC sleeve.


**Box Method**

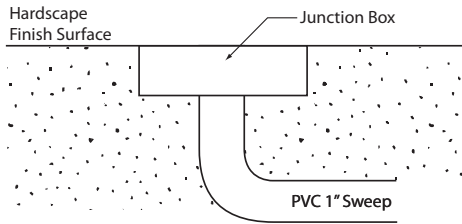


**PVC Sweep Only**

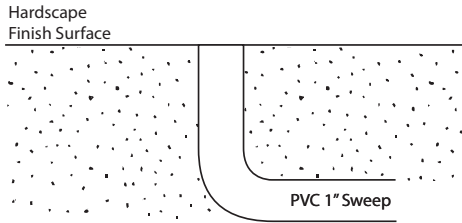

2. Splice fixture lead wires to feed wires from remote 24 volt Class II AC magnetic transformer. Use waterproof wire nuts to make connection.


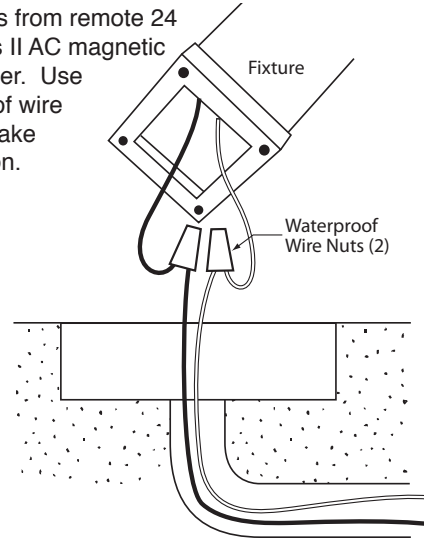


4. Use 1/2-20 flat head screws to bolt fixture to concrete anchors. Provide 24 volt AC voltage to LED light source. Ground fixture.

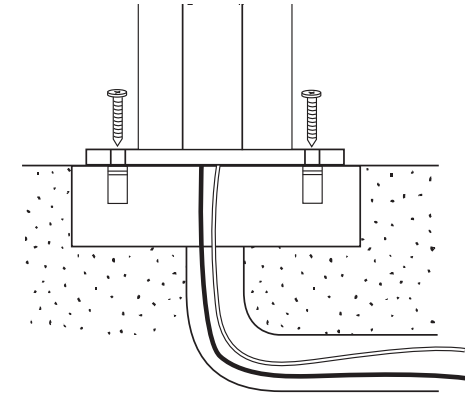

**Aria Post Install Detail**

3. Use the mounting base detail template (on back of this sheet) to position the concrete plugs on the hardscape. Drill holes and install concrete plugs following manufacturer's guide lines.

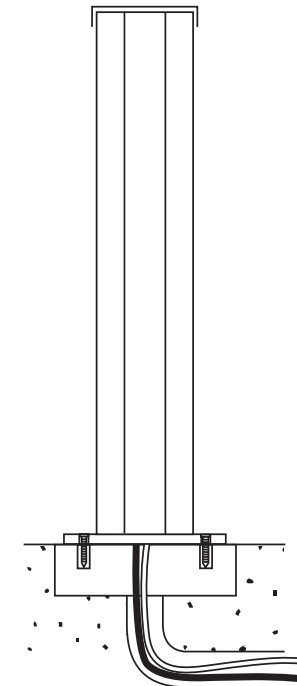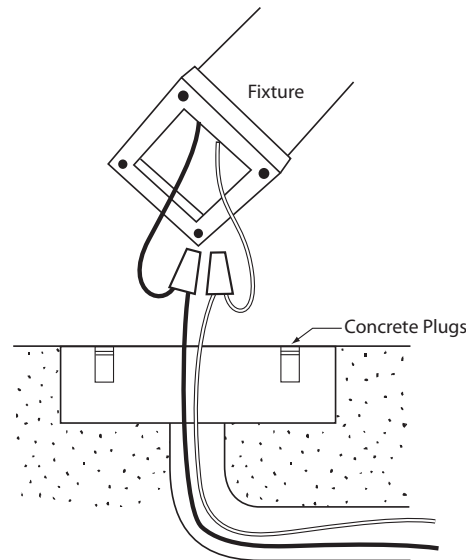

**1. For concrete installation:** Establish a concrete footing in using 2 x 8 framing. Sink junction box at 2" depth in concrete on top of 2 x 6 framing. Use Aria Post Full Scale Mounting Base Detail Template to set anchor bolts in concrete. Screw base into anchor bolts once concrete has set and dried.

Note: Use Water Proof Wire Nuts For All Splices Inside Junction Box

# Aria Post Mounting Detail Template

